 


Product Specifications

Viewable Graphic Size: 23.6" w x 76.8" h
 Graphic Finishing: 2.5" pole pocket on top and bottom
 Color: Black
 Footprint Dimensions: 30.5" x 43.5"
 Graphic Template Available

Product Parts

- 1 - Base
- 2 - Vertical Pole w/Spring (x2)
- 3 - Vertical Pole (x2)
- 4 - Cross Arm (x2)
- 5 - Large Bolt (x4)
- 6 - Locking Washer (x4)
- 7 - Rubber Washer (x4)
- 8 - Stake (x4)
- 9 - Wrench
- 10 - Small Allen Wrench
- 11 - Large Allen Wrench

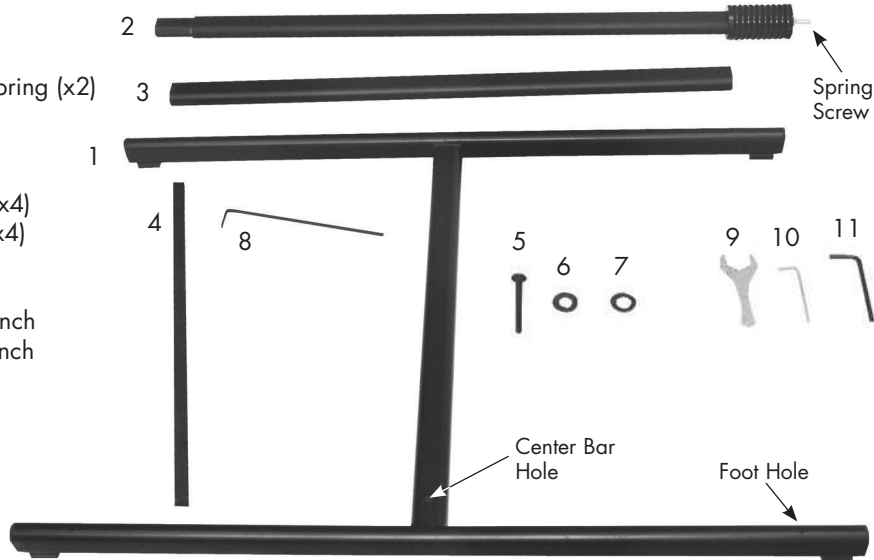

Display Set-Up

Step 1

Begin by removing the parts from the box and placing them on a clean, flat surface.

Step 2

 
 
Remove the washer and bolt from the screws on the bottom of both Vertical Poles w/Springs (2).



Step 3


Place the Base (1) on it's side and insert the Spring Screw on the bottom of the Vertical Pole w/Spring (2) into the hole located in the center bar. Make sure the Base (1) feet are on the opposite side to where you are entering the pole screw. Replace the washer and bolt and tighten using the Wrench (9).

Repeat for second Vertical Pole w/Spring (2) and set display right side up on the floor.

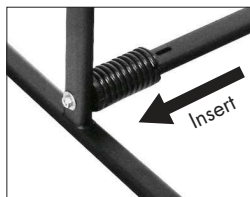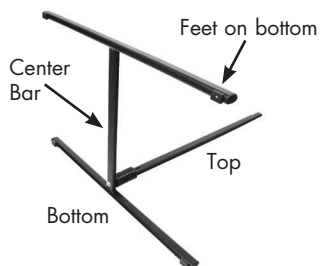

Step 4

 Position the two Vertical Poles (3) parallel from each other, with the indented end on the bottom. Place a Locking Washer (6) on to a Large Bolt (5). Insert the Large Bolt (5) into the top hole of a Vertical Pole (3) and place the Rubber Washer (7) on to the end of the Large Bolt.

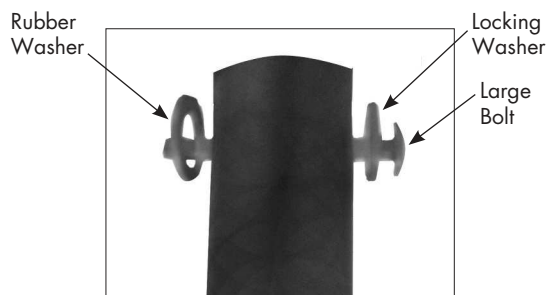

Display Set-Up Continued...

Step 5

Insert the Cross Arm (4) into the top pole pocket of your banner and thread the Large Bolt (5) into the Cross Arm (4).

Repeat Steps 4 & 5 for the other side of the Top Cross Arm (4) to secure.

 


Step 6

Use the Small Allen Wrench (10) to thread the small "screw" in the top of the Vertical Pole w/Spring (2) so it is flush with the pole.

Repeat for second Vertical Pole w/Spring (2).


*Do not thread the small "screw" all the way through, or it will fall into the pole's cavity.

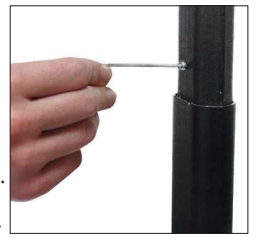

Step 7

Insert the Vertical Poles w/Springs (2) into the Vertical Poles (3) and use the Small Allen Wrench (10) to reveal the small "screw" to hold the pieces together.

 *Again, do not thread the small "screw" all the way, or it will come out of the pole.

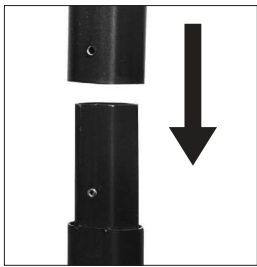

Step 8

Repeat Steps 4 and 5 for the bottom pole pocket of your banner using the bottom holes in the Vertical Poles w/Springs (2).



Step 9

Insert the Stakes (8) into the feet holes in the Base (1) and into the ground for added stability.



Storage

Place all product parts into shipping box and store in a cool, dry location.

Care

To clean, wipe with damp cloth.

Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.