

Spike Base for Sail Signs

190706

Product Parts

1 - Spike Base



Display Set-Up

Step 1

Remove the base from the box and move it along with your assembled sail sign to your desired location.

Step 2

Stick the Spike Base (1) in the ground until the bottom of the pole holder sits on top of the ground's surface (about 14.5" into the ground).



Step 3

Slip the pole of your sail sign over the pole on the Spike Base (1) to attach.



Step 4

Your Sail Sign is now ready to display.



Storage

Place the base along with the sail sign into the Sail Sign's Carry Case and store in a cool, dry location.



Care

To clean, wipe with damp cloth.

Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.

12.2.13