Zoom Flex Small Fiber Flag

ZOOM-FLX-SM ZOOM-FLX-SM-E

The Zoom Flex Flag features a full fiber pole and wind-resistant flag. For indoor or outdoor use, the flexible, design allows the graphic to rotate in the wind. The Zoom Flex Flag comes in your choice of single or double-sided and is offered in four shapes - Feather, Straight, Teardrop and Edge. Heights vary based on flag shape. Ground stake and storage bag included.




materials for recycle: aluminum, select wood, fabric, cardboard, paper, steel, and plastics.

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE. See Graphic Templates for graphic bleed specifications.

features and benefits:

- Can be used indoors or out
- Graphic rotates in wind
- Ground stake and storage bag included
- Water fillable donut adds stability to
- the floor base (recommended)

dimensions:

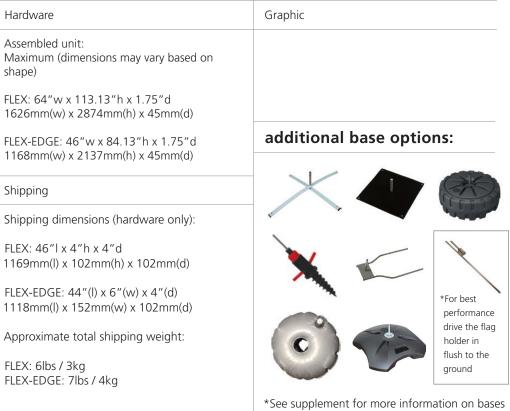

additional information:

Double-sided graphic includes opaque liner.

For applications below 40 degrees fahrenheit, use sand in place of water.

Graphics will pack in a separate box.

- Four graphic shape options: Flex- Feather,

Straight, Teardrop, and Edge-rectangle.

- Additional sizes available

manufacturer defects

- Includes carry bag or case

- Double-sided graphic available

- One year hardware warranty against

Wind rating: 37mph / 60kph max

Use in adverse weather voids all warranties.

Flag Size: Number of Poles Small 3 Medium 4 Large 4	
Large 4 Extra Large 5	

SET-UP ZOOM-FLEX-EDGE


Flag Size: Small Medium Large Extra Large	Number of Poles 3 4 4 5	

Attaching Graphic for ZOOM-FLEX







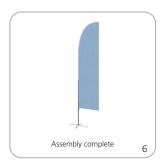

Attaching Graphic for ZOOM-FLEX-EDGE













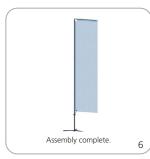

Zoom Flag Bases

25"L x 2"H x 2"D 4lbs

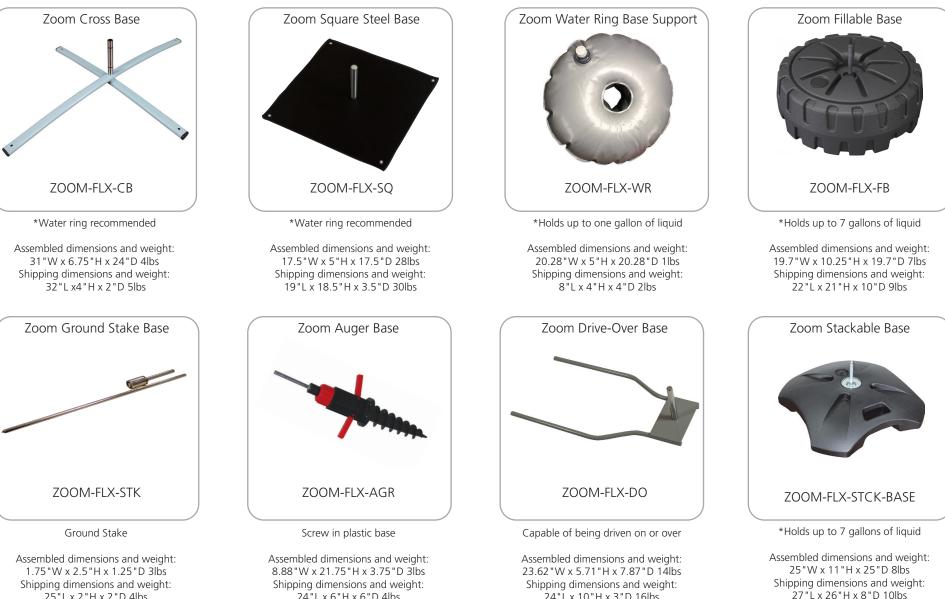

24"L x 10"H x 3"D 16lbs

24"L x 6"H x 6"D 4lbs

Optional Zoom Flag Accessory

TNT-ZOOM-ACC


Pair your Small or Medium Zoom flag with one of our standard tent canopies.

Components







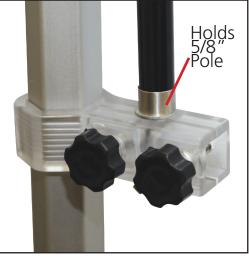



Step by Step



Step 1. Clamp the two accessory pieces to the chosen tent leg.



Step 2. Lock the accessory pieces in place with the included screws.



Step 3. Unscrew the pole pin wing nut, slide the pin through the accessory piece hole, and lock in place with the wing nut.

Place your Zoom Flag pole on the pole pin.