


# Wire Basket End Caps

## Parts:



2 Standard  
Slot Rails

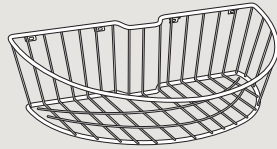

Wire Basket(s):  
NOTE: Your Kit may  
include 2 or 3 Baskets



2 Brackets and 4 screws  
for each Basket in your Kit



Phillips Screwdriver



Allen Wrench (supplied)



Goggles

## Required Tools

1. Loosen set screws on both Standard Slot Rails. (Illustration A)
2. Slide each Standard Slot Rail into opposite grooves of the Beltrac Stanchion that will hold the End Cap Kit. Push the extrusion all the way down. (Illustration B)
3. Tighten the set screws on the Standard Slot Rails to keep it firmly in place. (Illustration C)
4. Choose a desired height for each Basket. Insert 2 Brackets into opposite slots by pushing into a slot, then sliding down until secure. Make sure both Brackets are at the same height. (Illustration D)
5. Position the Basket in front of the 2 Brackets, making sure that the 4 tabs on the basket align with the screw holes on the brackets. (Illustration E)
6. Verify heights for each Basket, as once secured, Baskets can not be repositioned without disassembly.
7. Using a Phillips screwdriver, secure the Basket to the Brackets using the 4 screws provided. (Illustration F)
8. Repeat steps 4-6 for each Basket.

