Popup Bar Mini Header

PBFM902-B-HDR

The mini portable Popup™ Bar header is an accessory that easily attaches to the mini Popup Bar counter top. The aluminum tube frame simply screws into the counter top. A stretchy printed fabric graphic slips over the top of the frame for branding and messaging.







We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE. See Graphic Templates for graphic bleed specifications.

features and benefits:

- Lightweight tube frame
- Fabric graphics slip over frame
- Connects to counter top

- Can be recycled
- One year limited hardware warranty against manufacturer defects

dimensions

uillielisiolis.	
Hardware	Graphic
Assembled unit: 22.13"w x 59.52"h x 1.18"d 563mm(w) x 1512mm(h) x 30mm(d) Approximate weight (Hardware only): 3 lbs / 82kg	Refer to related graphic template for more information. Visit: www.exhibitors-handbook.com/ graphic-templates
Shipping	additional information:
2 1	Graphic material:


Graphic material: Packing case(s): 1 Box(es)


Shipping dimensions: 48"l x 11"h x 4"d 1,120mm(l) x 280mm(h) x 102mm(d)

Approximate total shipping weight: 4 lbs / 2 kg

Dye-sublimation zipper pillowcase fabric

Included In Your Kit

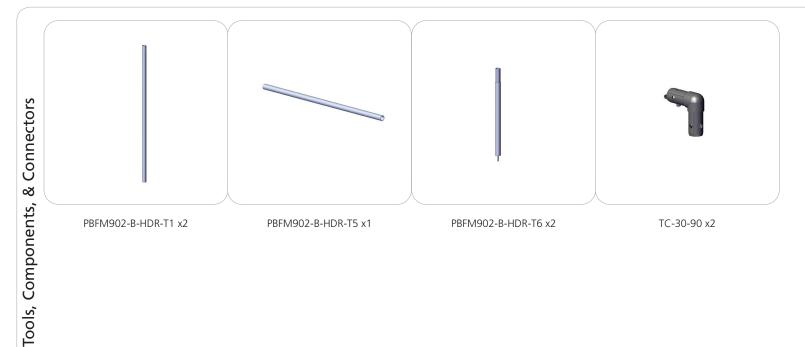


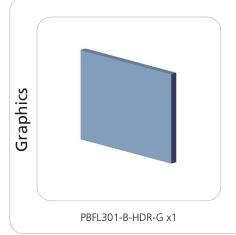

Exploded Diagram

PBFM902-B-HDR TC-30-90

Labeling Diagram

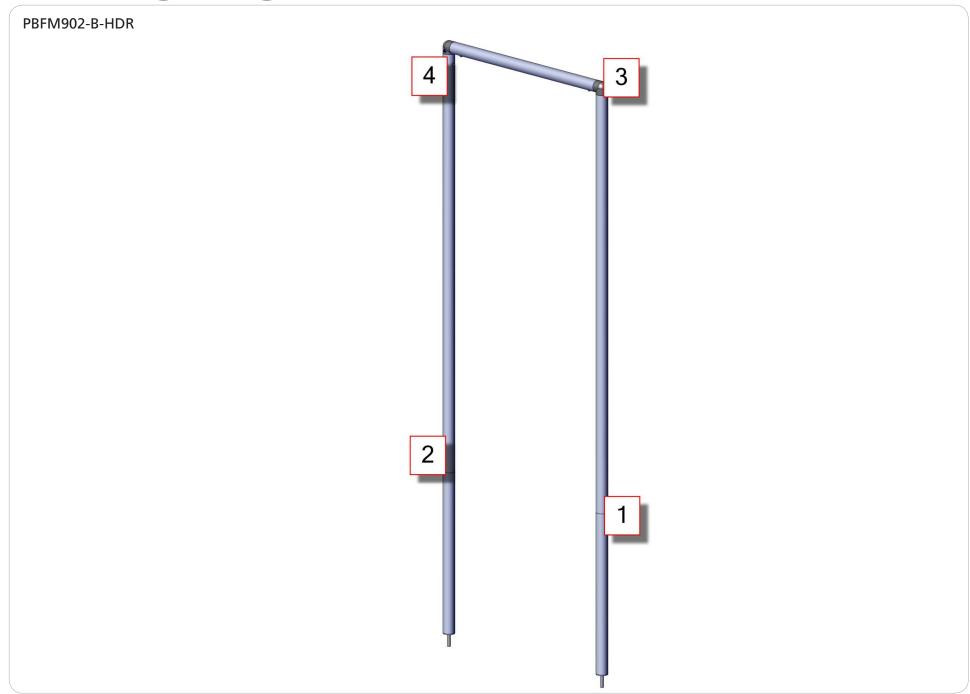



Kit Assembly

Step by Step

Step 1.

Gather the components to build STEP 1. Use the Exploded View and the Labeling Diagram for part labels.

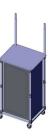

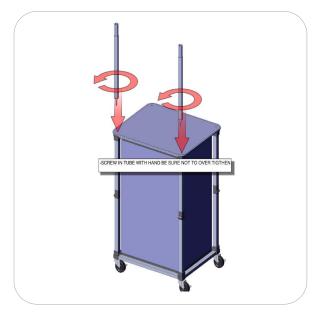

Step 2.

Gather the components to build STEP 2. Use the Exploded View and the Labeling Diagram for part labels.

Reference Connection Method(s) 1 for more details.






Step 3.

Gather the components to build STEP 3. Use the Exploded View and the Labeling Diagram for part labels.

Reference Connection Method(s) 1 for more details.



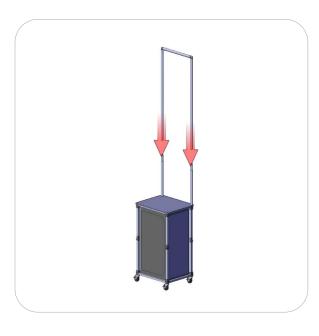

Step 4.

Setup is complete.

Reference Connection Method(s) 2 for more details.






Connection Methods

Connection Method 1: TC-30-90 —

Connection Method 2: ATTACH

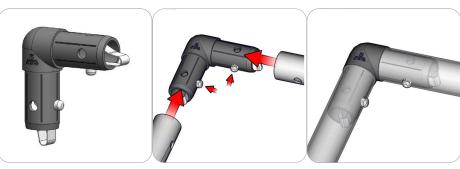









Take the plastic connector and make sure the snap buttons are in proper position for the frame tube Pull graphic over top of top frame. There is no zipper, graphic just slides over tubes like a pillow top. holes. Simply press the snap button with your thumb and carefully slide the tube onto the connector. The snap button should pop through. Some twisting may be necessary to assure the snap button has popped all the way through the tube hole. Do not force the connection and be careful with the tube edges, they may be sharp.