
Formulate Arch 06

ARCH-06

Formulate® 12.5ft tall Arch 06 adds dimension, structure and design to any event or interior space! Formulate 12.5ft Arch 06 couples aluminum tube frames with stretch, pillowcase fabric graphics to create a dynamic exhibit structure. Arch 06 spans 17' wide and over 5' deep. Formulate architectural structures are made in the USA and collapse to a fraction of their size. Arch 06 packs easily into two wheeled cases for easy storage and transport.

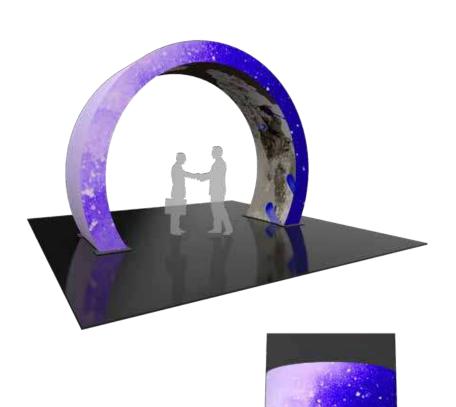

features and benefits:


- State-of-the-art 50mm curved aluminum tube frame with expanding spigots
- Pillowcase fabric graphic stretches over the frame and zips at the bottom of the arch
- Easy to store and ship
- Quick to set up

- Includes carry bag or case
- Lifetime hardware warranty against manufacturer defects
- Kit includes frame, dye-sublimated zipper pillowcase graphic and two wheeled molded OCE storage cases

dimensions:

Hardware	Graphic
Assembled unit: 285.19" w x 140.37" h x 153.43" d 7244mm(w) x 3566mm(h) x 3898mm(d) Approximate weight: 184 lbs / 84 kg	Refer to related graphic template for more information. One year warranty.
Shipping	additional information:
Packing case(s): 2 OCE Shipping dimensions: OCE: Expandable case length (I) may vary 40" - 66"I x 18"h x 18"d 1016-1677mm(I) x 458mm(h) x 458mm(d) Approximate total shipping weight: 230 lbs / 105 kg	Graphic material: Dye-sublimation zipper pillowcase fabric When included in a larger kit, a different packaging solution will be listed to accommodate all contents of the kit. Individual packaging no longer provided.

Included In Your Kit

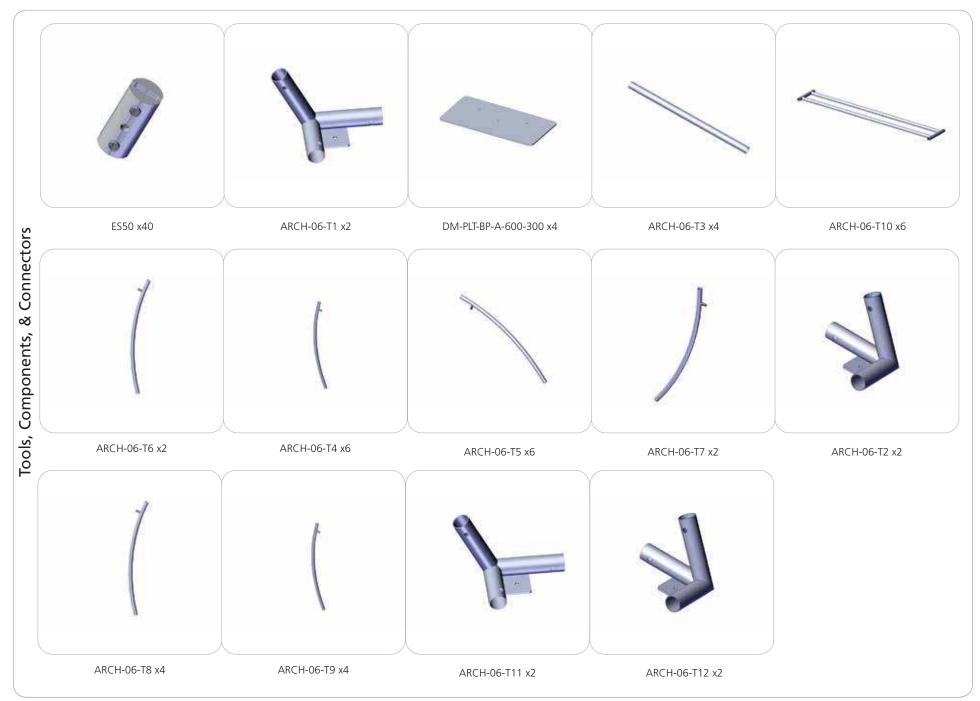


Included In Your Kit





ARCH-06-G x1


Graphics


ARCH-06
RIGHT BASE SECTION

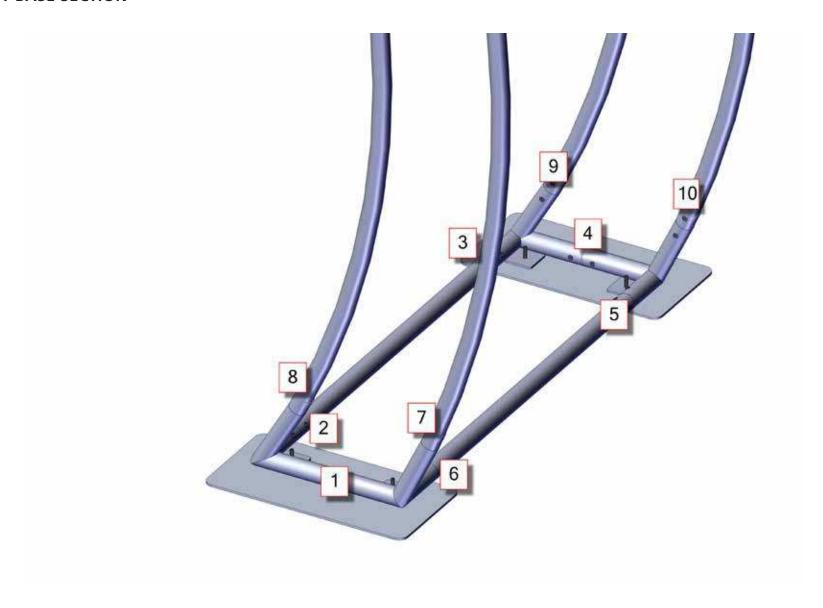

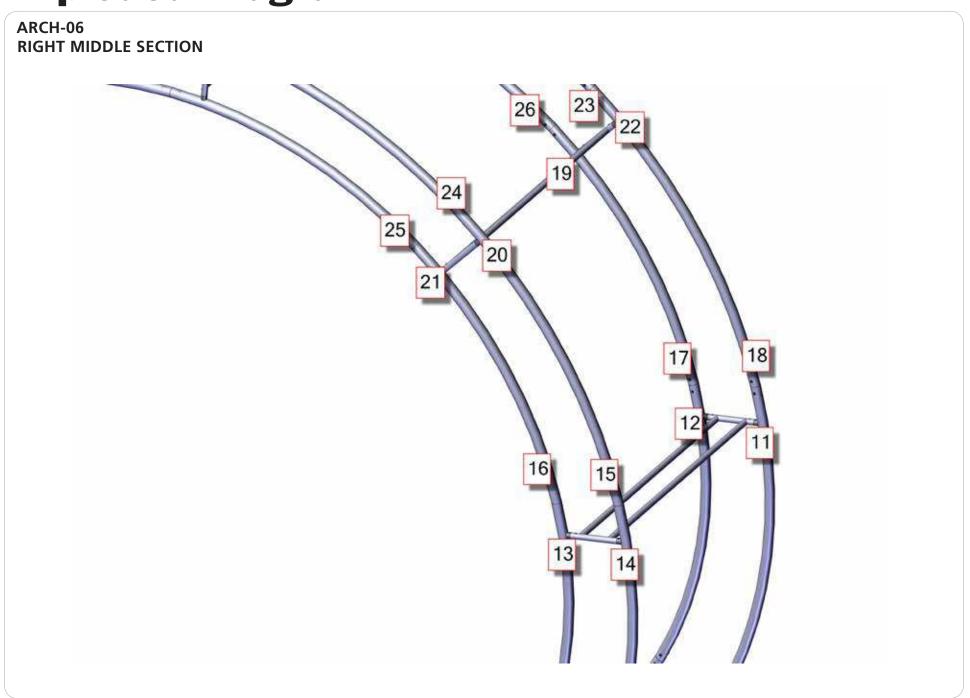


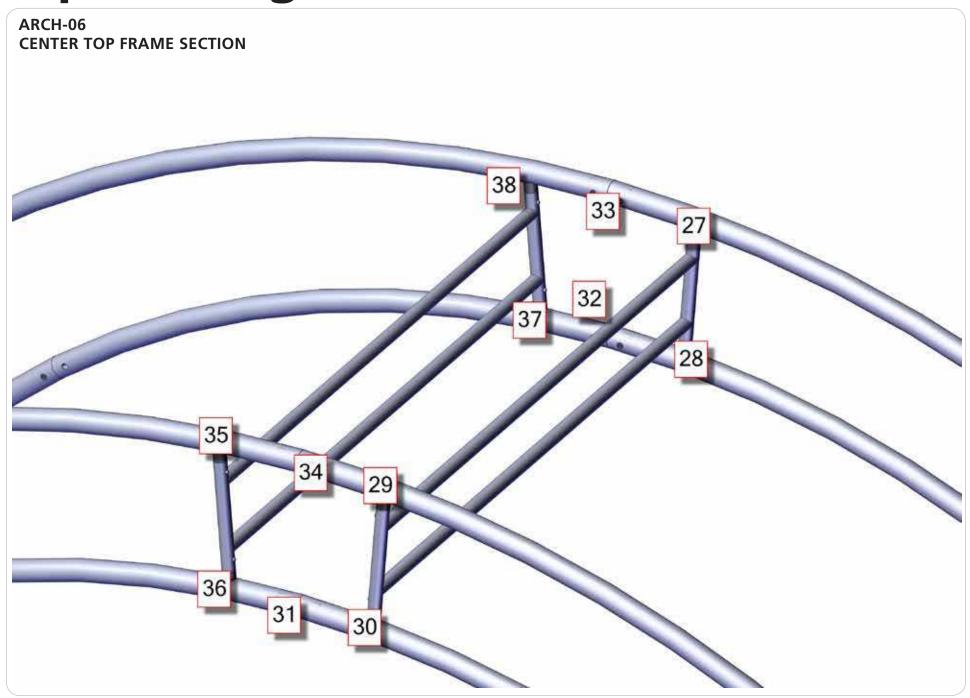

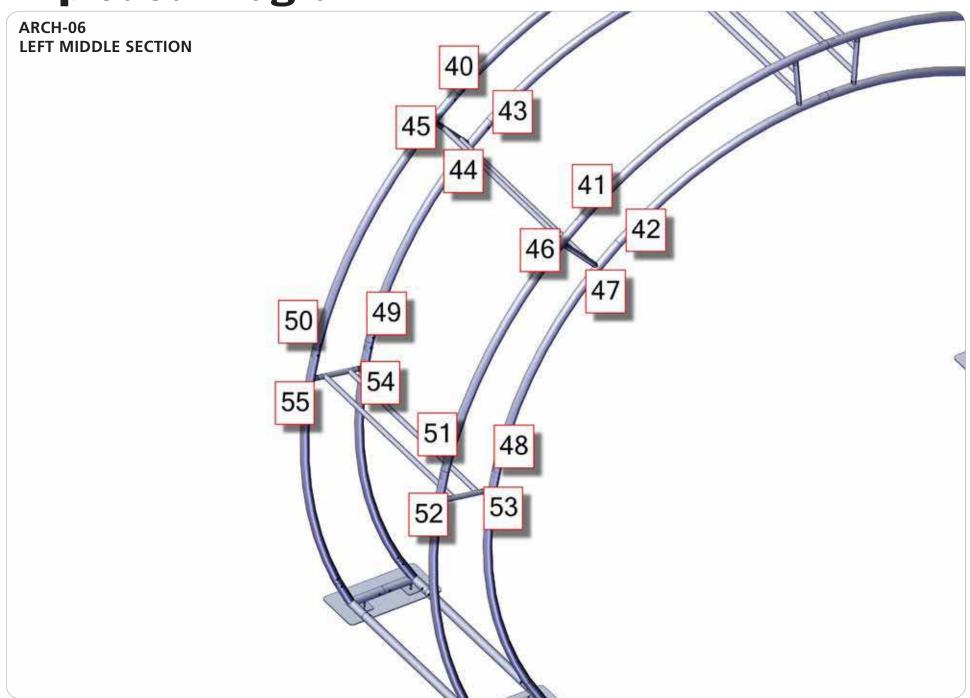

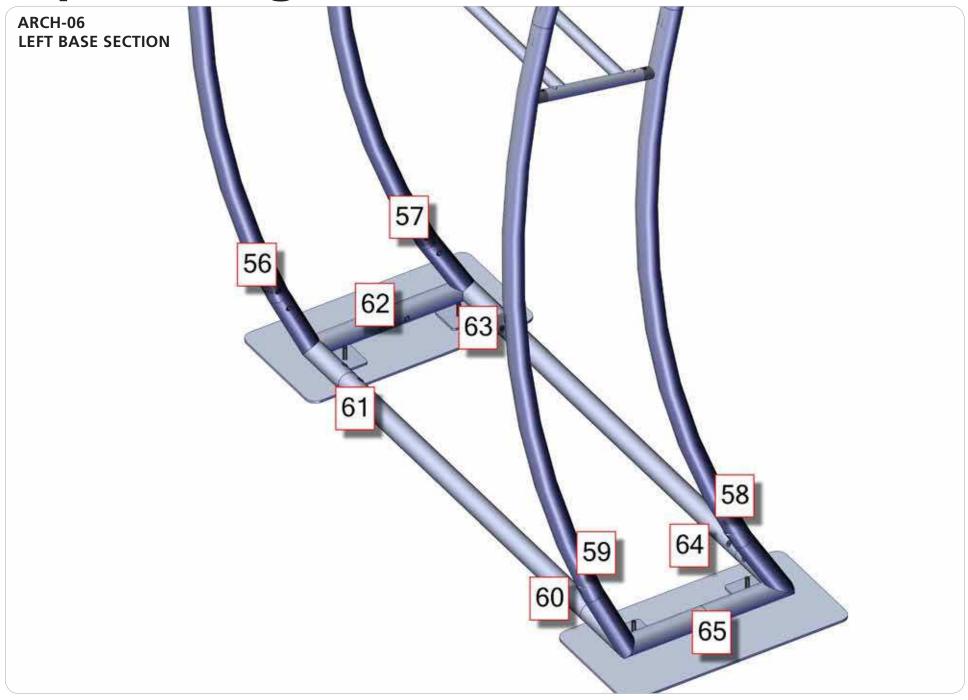

Labeling Diagram

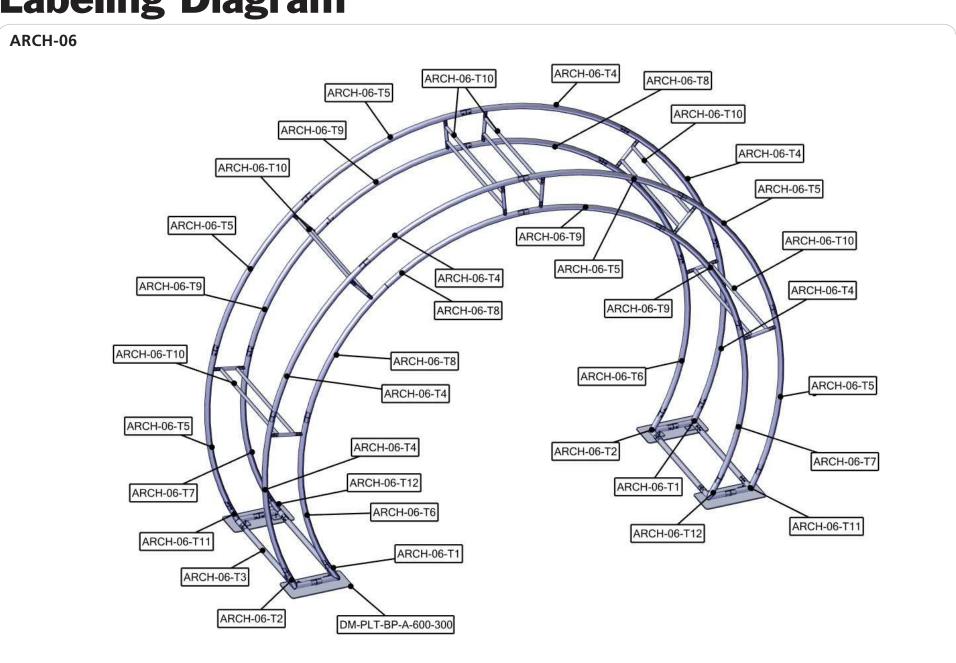

Kit Assembly


Step by Step

Step 1.

Gather the components to build the both inside frame. Use the Exploded View and the Labeling Diagram for part labels.

Reference Connection Method(s) 1 and 2 for more details.



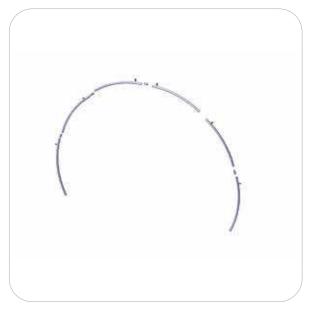

Step 2.

Gather the components to build the both outside frame. Use the Exploded View and the Labeling Diagram for part labels.

Reference Connection Method(s) 1 and 2 for more details.






Step 3.

Gather the components to build and attach middle sections with inside frames. Use the Exploded View and the Labeling Diagram for part labels.

Reference Connection Method(s) 1 and 2 for more details.



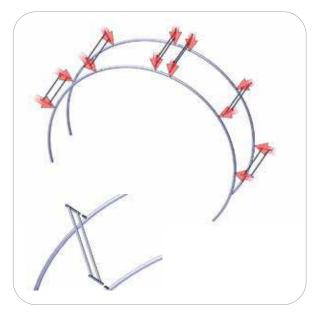


Step 4.

Gather the components to attach outside frame to structure. Use the Exploded View and the Labeling Diagram for part labels.

Reference Connection Method(s) 1 and 2 for more details.



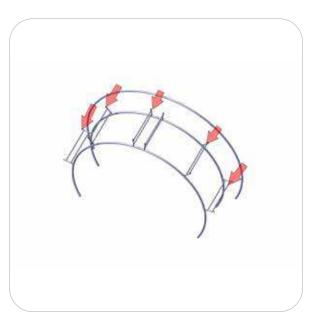

Kit Assembly


Step by Step

Step 4.

Gather the components to attach outside frame to structure. Use the Exploded View and the Labeling Diagram for part labels.

Reference Connection Method(s) 1 and 2 for more details.



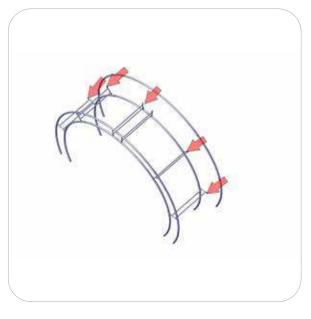

Step 5.

gather components to assemble lower base. Use the Exploded View and the Labeling Diagram for part labels.

Reference Connection Method(s) 1 and 2 for more details.






Step 6.

Gather the components to attach base to structure. Use the Exploded View and the Labeling Diagram for part labels.

Reference Connection Method(s) 1 and 2 for more details.



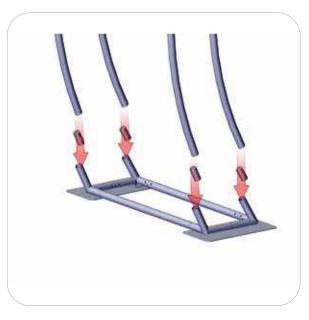


Step 7.

attach Arch-06 graphic. Slide over the frame closed with zipper




Setup is complete.

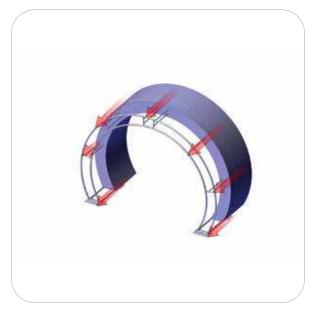

Connection Methods

Connection Method 1: ES50 —

Connection Method 2: TC-30D –

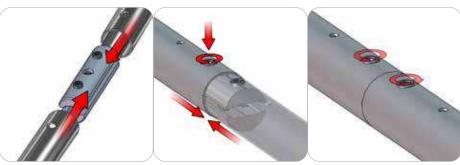





Press the snap button with your thumb and slide the tube and connector together so that the snap button snaps fully into the lock hole. To disassemble, press the snap button and pull apart.